




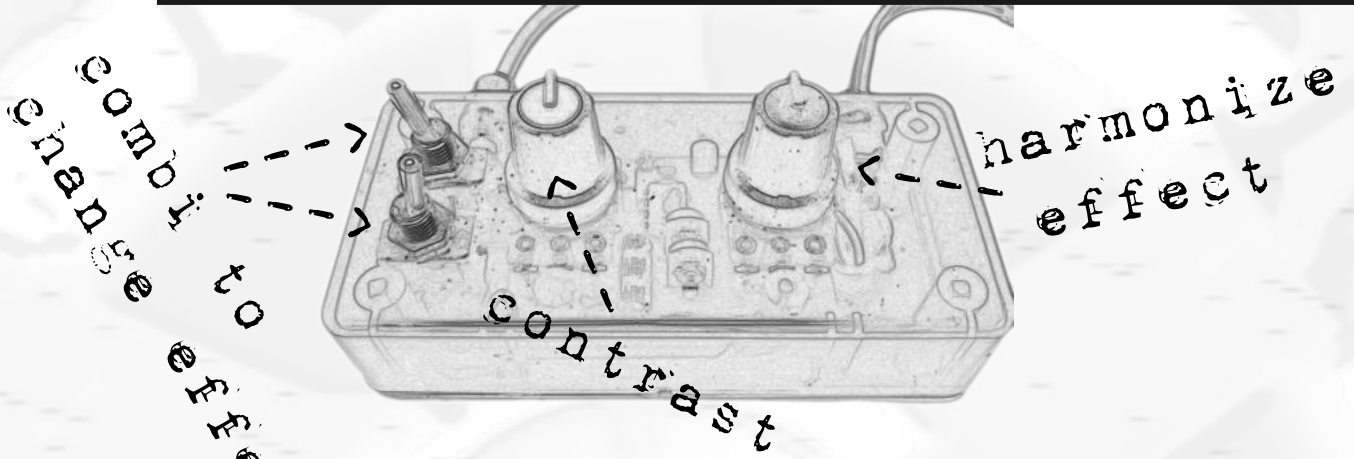


VIDEO EFFECT FOR SK1

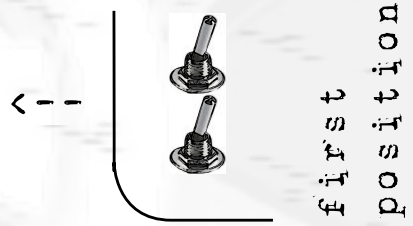


rough point effect

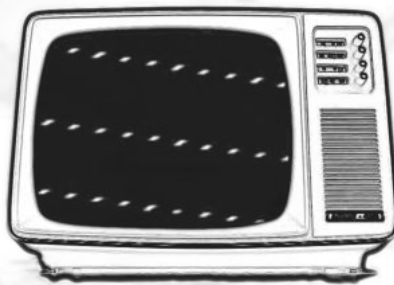

third position


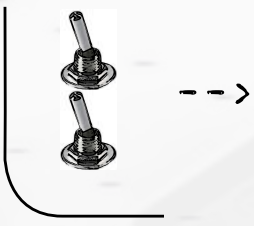


-->

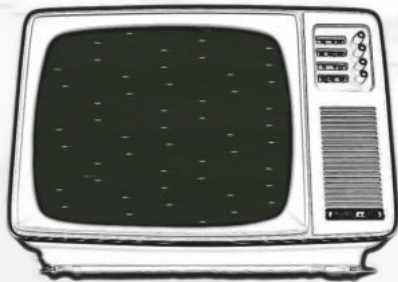

comma effect

effect star

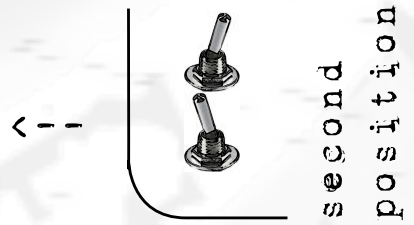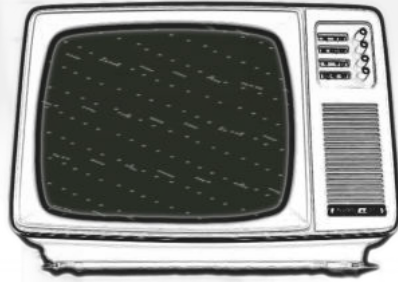

<--


fourth position





--> effect cut off



VIDEO EFFECT FOR SK1

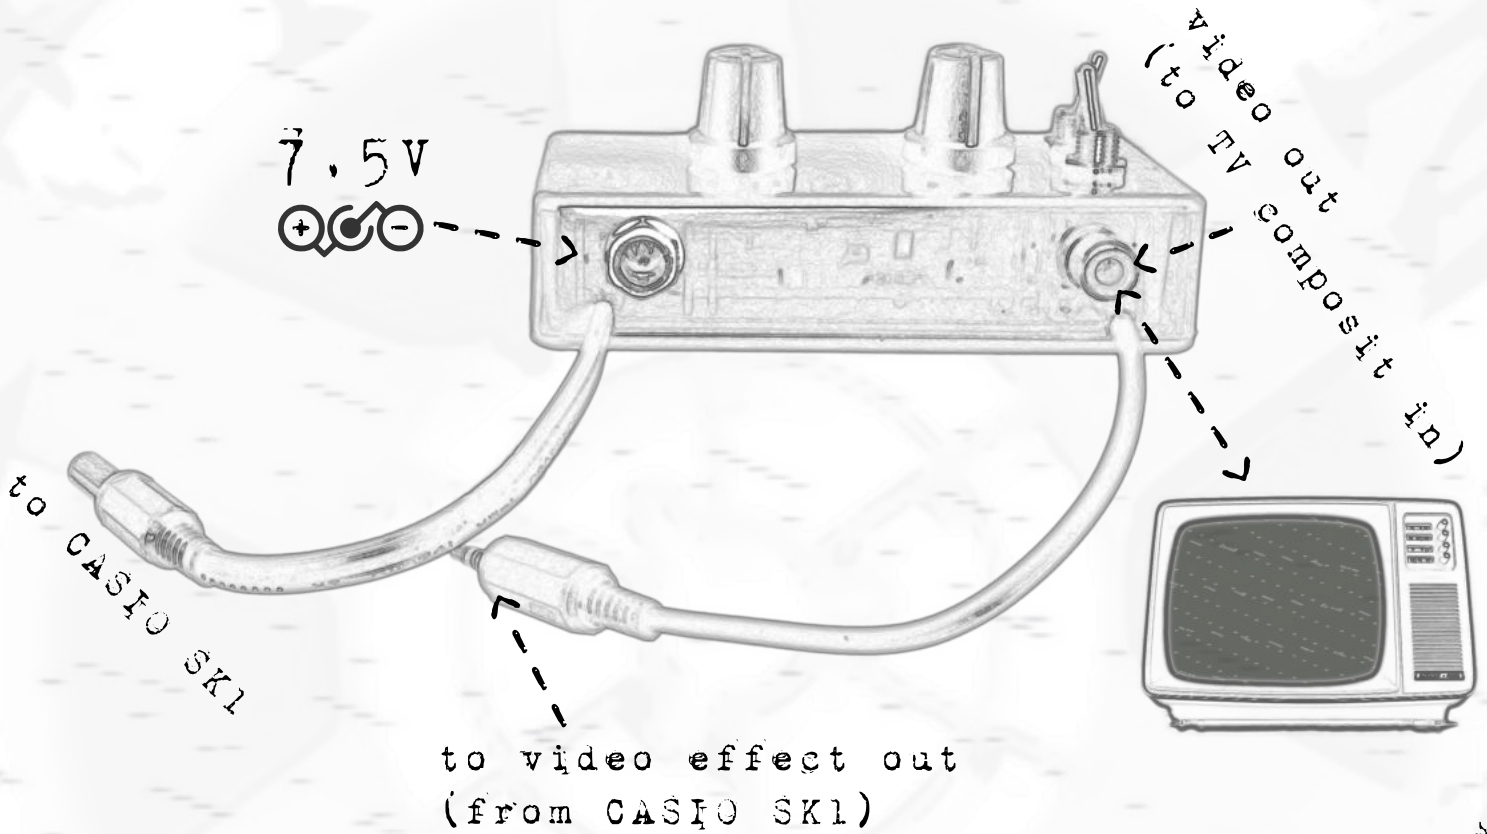


solder the cable to the SK1

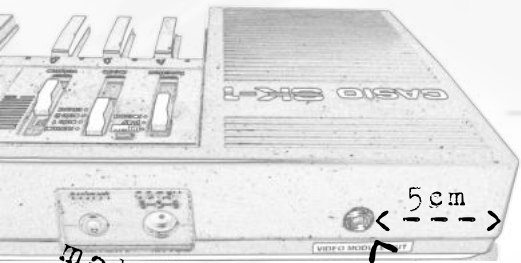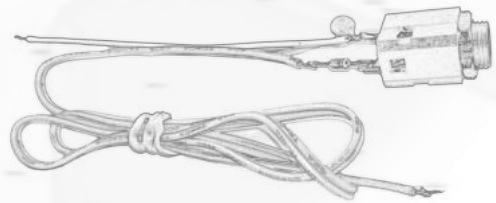

make a hole for connector
cca 5cm from the edge


connect it

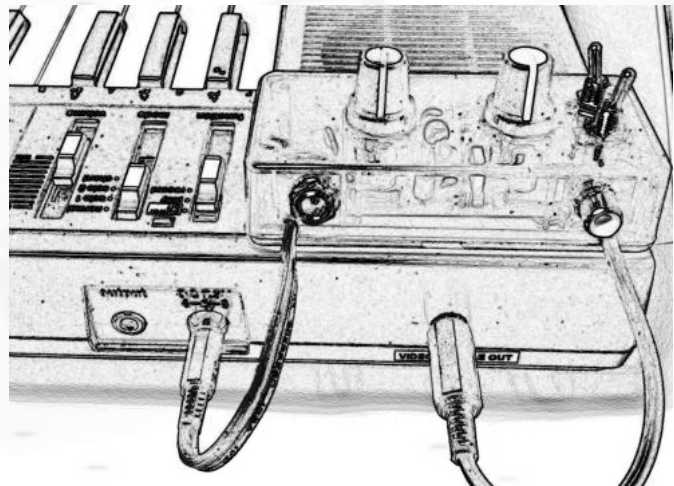


use at your own risk



VIDEO EFFECT FOR SK1

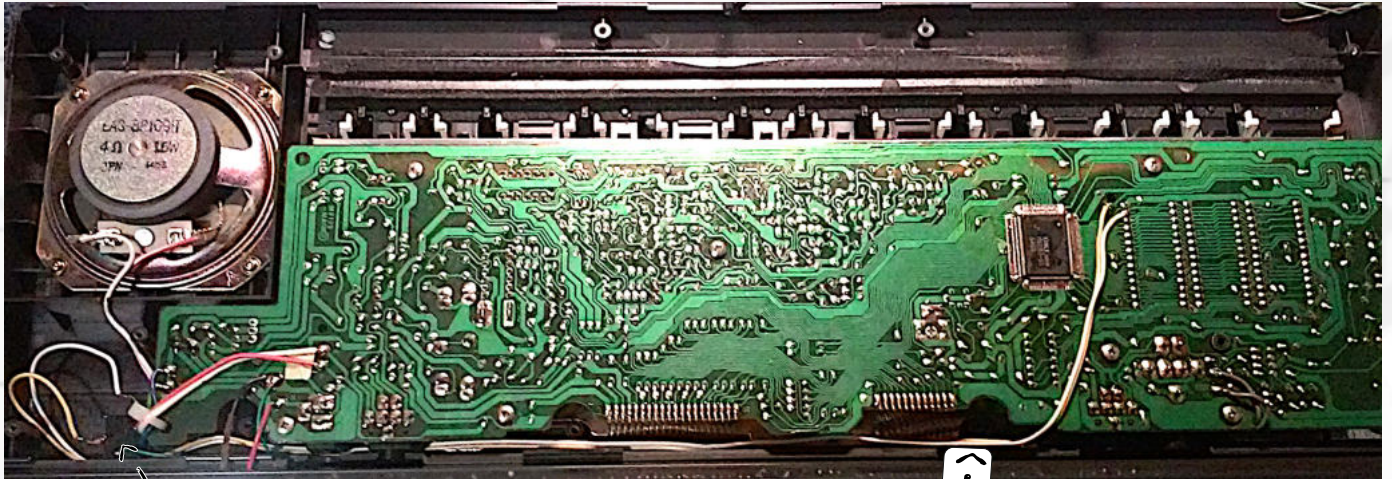

connector
jack 3.5

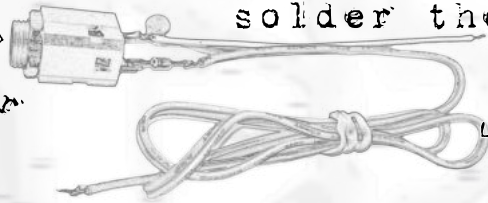

solder the cable

